



## AUTOMATIC DRIP KIT - INSTALLATION MANUAL



1. Connect Screen filter to water inlet in the arrow direction



2. Connect Irrigation Valve to Screen Filter in the arrow direction




3. Connect the Water Flow Sensor to Irrigation Valve in the arrow direction



4. Connect "Threaded coupling or GA reducer" to Flow Sensor & attach 16mm




5. Run 16mm Drip line to each row of plants. Add Elbow/Tee/ Tap Valve as required

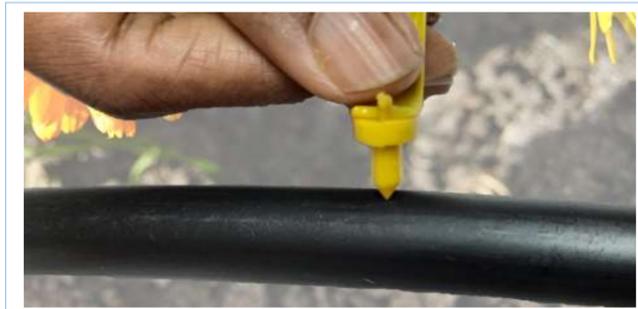


6. Make a punch in 16mm Main Line to insert 4mm feeder connection per plant



7. Insert 6mm Tap Valve in 16mm line & connect 4mm feeder line to desired length

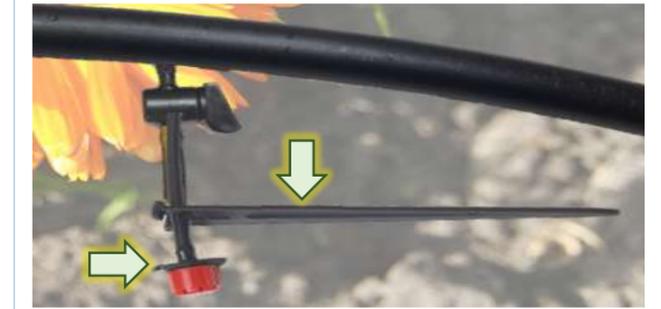

8. Attach drip stake & emitters to 4mm feeder line, insert the stake in soil

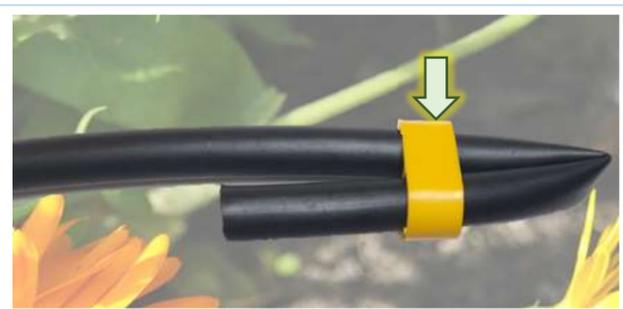


9. Add End Cap at the end of each 16mm Drip line



10. Plug in Sensor & Valve Electrical Pins to one end of Wire connecting Controller



11. Connect other end of Wire with Green Terminal in Controller

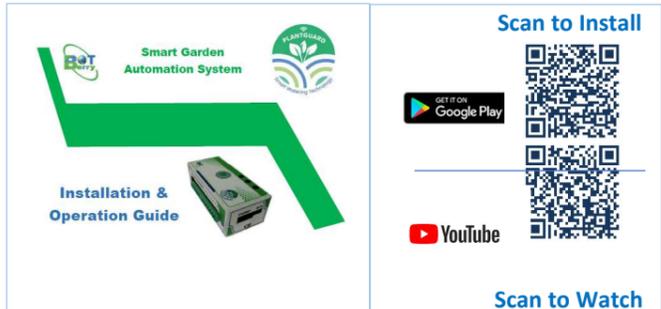

12. Follow the Installation Guide in Controller box for Installation & Watering

### BotBerry Solutions LLP

391/5D, S.Kolathur Main Road, Viduthalainagar., Chennai 600 129, Tamilnadu, India  
Web: [www.botberrysolutions.com](http://www.botberrysolutions.com) Reach Us : [support@botberrysolutions.com](mailto:support@botberrysolutions.com)

Copyrights © 2020-21 BotBerry Solutions LLP. All rights reserved.